



ILLUSTRATED USER GUIDE

JenneTastic Sensory Tent

Setup, safe use, care, and storage

When everything becomes too much... they just need calm.

English guide • 2026 edition

jennedesign.ca

A personal calming space, ready quickly



55 in

height

44 × 44 in

width and depth

Under 60 sec

setup

Ages 3+

with supervision

JenneTastic is a portable inflatable sensory tent designed to create a calming indoor space.

Each set includes

- JenneTastic sensory tent
- Manual pump with hose
- Carrying bag
- Bilingual guide

Set up in under 60 seconds



- Choose an indoor, flat, clean surface free of sharp objects.
- Remove the tent from the bag and unfold it completely.
- Locate the inflation valve at the rear of the tent.
- Secure the manual pump nozzle to the valve and operate the pump by hand.
- Inflate until the structure is stable and properly formed. Do not overinflate.
- Remove the nozzle, close the valve, and check stability on every side.

The manual pump must be operated by an adult.

Active supervision, exit always clear



- Indoor use only, for ages 3 and older.
- An adult must remain nearby and supervise use.
- Keep the magnetic door and exit path completely clear.
- Never place the tent near heat, flames, stairs, or high-traffic areas.
- The tent is a temporary calming space; it is not intended for sleep or active play.
- Do not use the tent if it is damaged, unstable, or insufficiently inflated.

Capacity

Optimal for one child who needs their own space. Large enough for two children and for a parent, educator, or professional to accompany a child when needed.

How long it can remain inflated

The tent is designed to remain inflated throughout the day or longer when the setup, placement, and safety instructions are followed.

Adjust the environment to the child's needs



Easy-access magnetic door

Allow it to close naturally. Make sure clothing, fingers, and objects are clear of the closure.

Adjustable rear window

Roll the panel upward and secure it without blocking the opening. Adjust light and visibility.

Exterior pocket

Store only lightweight, soft sensory items. Do not overload the pocket.

Interior structure

Use only suitable soft cushions or sensory tools and always keep the exit path clear.

The dedicated opening is at the rear



- Use only the rear opening intended for lighting or plug-in sensory-item cables.
- Never route a cable through the door.
- Keep cables outside the entrance and exit path.
- Inspect the setup before every use and remove any damaged cable.
- The cable opening does not power the pump: the included pump is entirely manual.

Inspect, deflate, and store



- Make sure the child has exited and remove all objects from the tent.
- Open the valve and allow the air to escape gradually.
- Gently flatten the structure without pulling on the seams.
- Clean with a soft, slightly damp cloth and mild soap.
- Allow the tent to dry completely before folding or storage.
- Store the tent, manual pump, and hose in the carrying bag in a dry, temperature-controlled place.

Regularly inspect the seams, valve, magnets, windows, manual pump, and hose.

07 • QUICK SOLUTIONS

The tent does not take shape

Check the nozzle, valve, and folds.

The tent loses air

Close the valve and inspect the seams.

The door closes poorly

Clear the magnets and realign both sides.

See every step

Click a button or scan its QR code to open the video.

QUICK SETUP



See the tent move from its carrying bag to a ready-to-use calming space.

Watch the video

COMPLETE DEMONSTRATION



Setup, openings, use, and storage shown with the real product.

Watch the video



Keep this guide with the product. For questions, contact JenneDesign.

This product does not replace supervision, professional assessment, or an intervention plan.

JenneDesign

Functional • Safe • Comforting